




Installing your sign - French Cleat - Interior

Tools Needed:

- 1) Level
- 2) Drill
- 3) 1/16" drill bit (or similar for drilling a pilot hole)
- 4) 1/4" drill bit (for drywall anchors)
- 5) Hammer (for inserting drywall anchors)
- 6) Drywall anchors (provided)
- 7) Pliers (to remove drywall anchors if they break or bend during insertion)

Instructions

- 1) Place the french cleat on the wall, with the ribbed side on the wall, the lip facing up

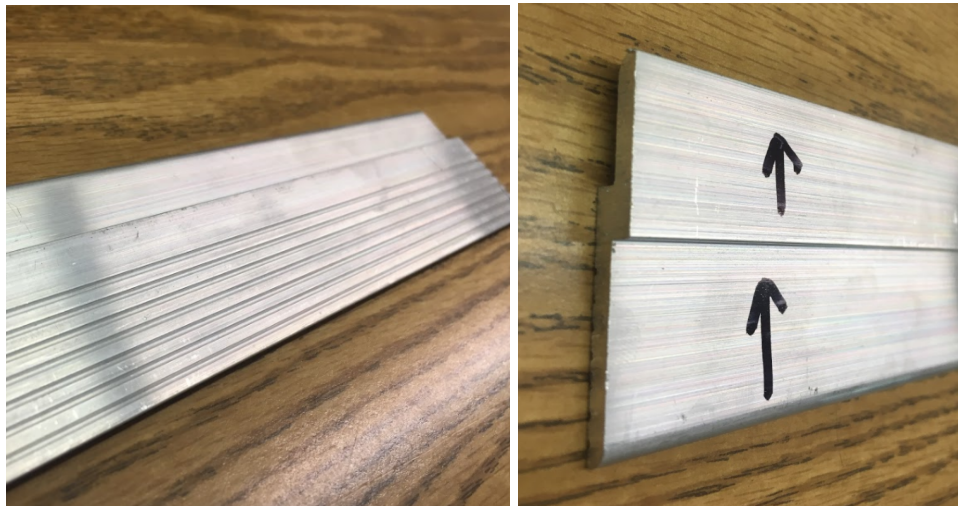


- 2) Make sure the french cleat is level, **if you have a template**, make sure the bottom of the french cleat is on the line marked on the template.
- 3) With a pencil, mark the wall through the holes on the cleat. Mark the furthest left, right and middle hole. We typically recommend one hole every 16 inches.
- 4) Remove the cleat and drill a pilot hole through your marks.

- 5) Drill each of the holes again but with a 1/4" drill bit
- 6) Insert drywall anchors into each hole

Empty hole



Hole with drywall anchor

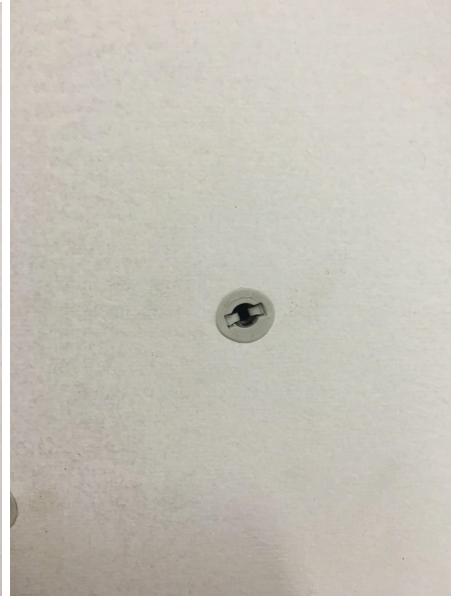

- 7) Place the provided french cleat on the wall and screw them into place, into each drywall anchor.
- 8) Now carefully hook the french cleat that is on the back of your sign into the french cleat that is on the wall.

