



## Installing your sign - Individual Pieces - Interior

### **Tools Needed:**

- 1) Drill
- 2) 1/16" drill bit (or similar for drilling a pilot hole)
- 3) Drill bit close to the same size as all thread
- 4) Level
- 5) Pliers (for twisting in the pieces of all thread)
- 6) Painters Tape
- 7) All thread & spacers (provided)
- 8) Optional - Silicone (*We recommend GE Silicone Iron Grip*)

### **Prep Work:**

- 1) Install the all thread into the back of each piece
- 2) Put spacers over top of all thread, onto the back of the piece

## ***Installation***


Step 1 - Take a look at your provided template.



Step 2 - Hang the template on the wall. Make sure it is level.



Step 3 - Drill pilot holes through all of the areas indicated on the template, after drilling pilot holes, remove the template and drill a hole close to the same size as the all thread as possible.

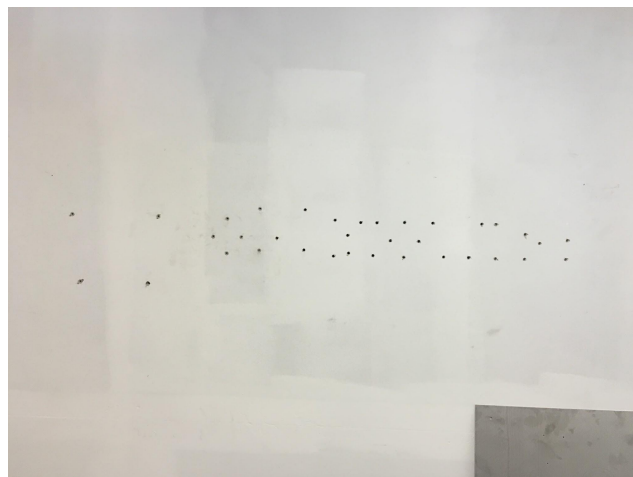

Step 4 - Insert pieces with all thread on the back, with spacers, into the drywall. Press them into place. Sometimes you have to lightly tap on the face of the letters to get the all thread to fit into the drywall. *(If you would like you may also put some silicone on the threads as well before inserting for a more secure fit)*

