



Installing your sign - Individual Pieces - Exterior

Tools Needed:

- 1) Drill
- 2) 1/16" drill bit (or similar for drilling a pilot hole)
- 3) Drill bit close as possible to the size of the all thread
- 4) Level
- 5) Template (included)
- 6) Stems and spacers (included)
- 7) Silicone adhesive (not provided, we recommend GE Silicone Iron Grip)

Prep Work:


- 1) Install the all thread into the back of the sign.
- 2) Put spacers over top of all thread, onto the back of the pieces.

Installation

Step 1 - Place your sign template on the wall, make sure it is level, tape it to the wall. Mark the holes that are going to receive the stems.



Step 2 - Drill pilot holes through all of the areas indicated on the template, after drilling pilot holes, remove the template and drill holes to close as possible to the same size as the all thread. This is ideal to ensure a tight fit into the wall surface. (Depth needs to be deep enough so that the stem with spacer is flush with the wall).

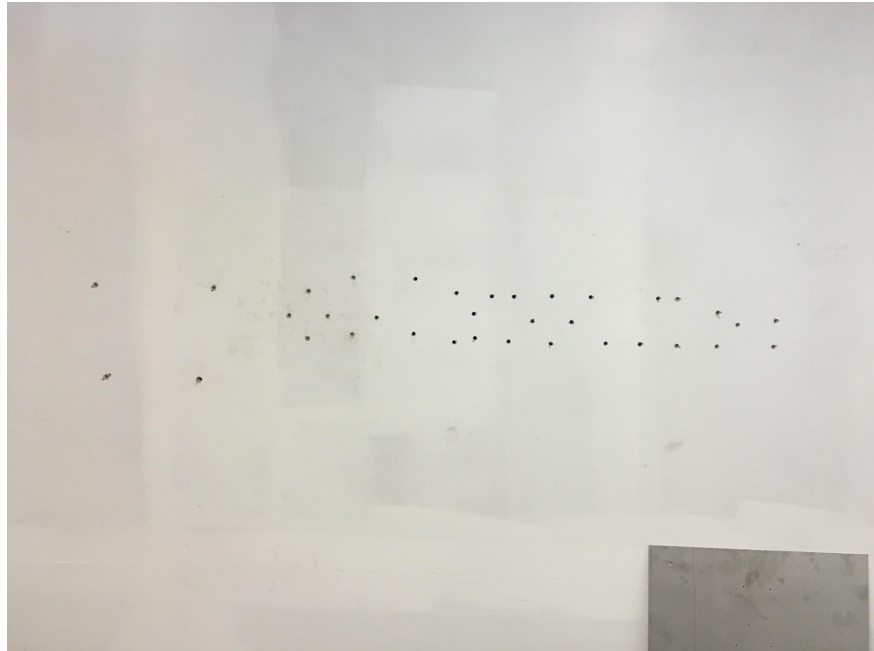

Step 3 - Inject adhesive into holes, until the holes are filled, for the stems.

Step 4 - Align and insert sign stems into holes drilled in the wall until seated. Let set for recommended amount of time.

